



INSTALLATION GUIDE

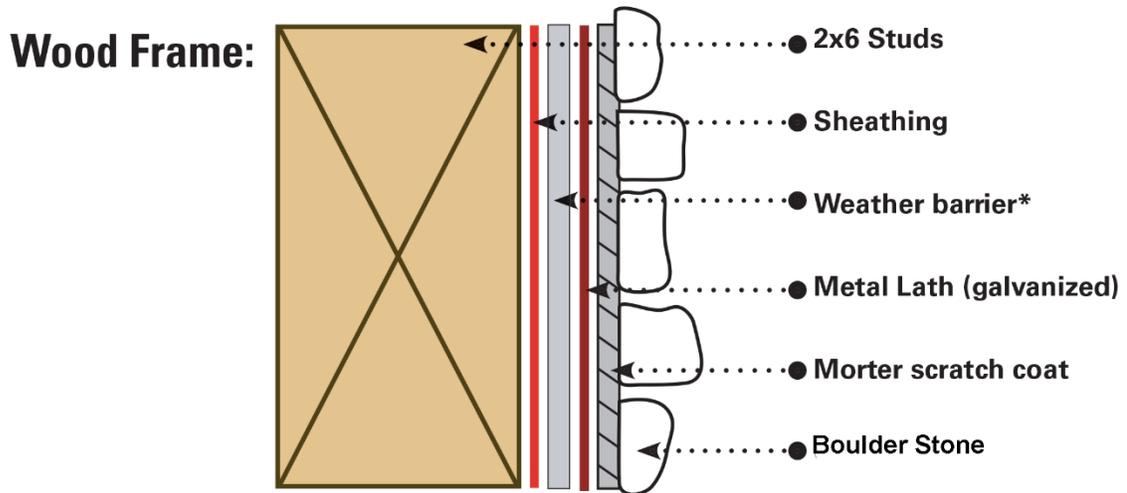

*Always check local building codes

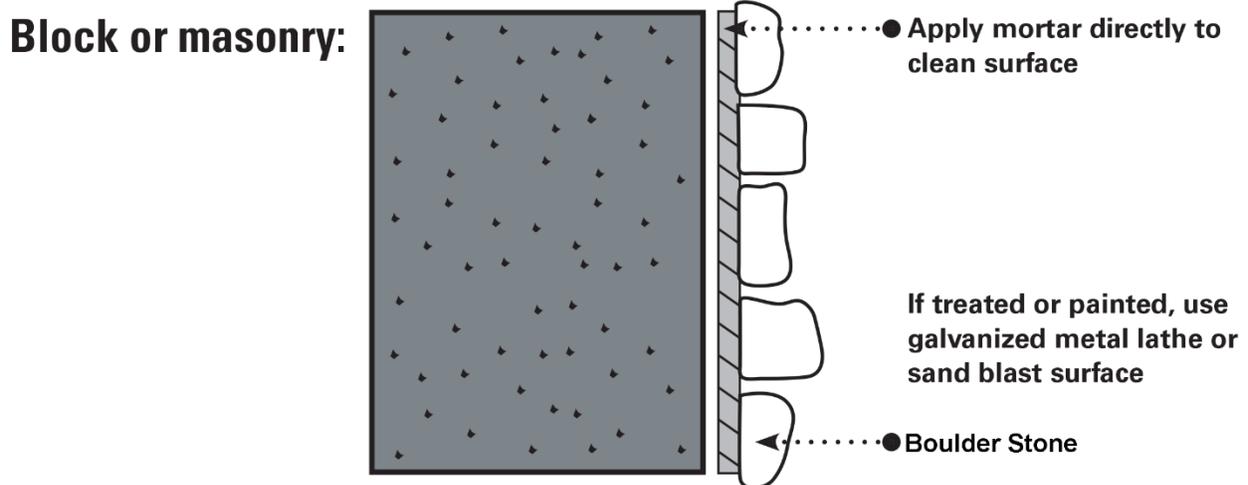

Stone installation:

Apply approximately 1/2 inch of mortar on back of stone and set stone on wall with back and forth movement.

Manufactured stones that can be installed one of three ways, grouted, dry stacked or both.

Check with Boulder Stone at the time of purchase for installation instructions that correspond with the type of stone you have selected.



CULTURED STONE VENEER